



Easily reaches corners
Llega fácilmente a las esquinas



Anti-static brush
El cepillo antiestático



200 ml cleaning fluid
El gel del no-alcohol de 200 ml

EN

- Pad cleaner with base thoroughly ensures cleaning without scratches or marks. Ergonomic pad handle provides firm and safe grip during cleaning.
- Retractable antistatic brush removes dust.
- 200 ml non-alcohol cleaning fluid safely removes dirt.
- Approximately 250 applications, depending on usage, number of applications may vary.

1. Turn off TV or screen before cleaning.
2. Push lever completely forward on retractable brush, exposing entire brush.
3. Use brush to gently remove dust, dirt and debris from LCD and plasma screen.
4. Shake screen cleaning fluid. Hold bottle 8" to 10" away from screen. Spray onto screen 1-3 times. Larger screens will require an additional spray.
5. Pick up pad cleaner. Position pad flat against screen. Gently drag fluid from the middle of screen out to the edges. Use triangular points to thoroughly reach into all corners.
6. Place pad cleaner back into base. Allow to dry thoroughly before storing.
7. Clean screen once every two weeks for optimal viewing.

Precautions

- Use cleaning fluid sparingly. Applying too much may cause dripping.
- Never point the spray at human or animal eyes. Consult doctor immediately in case of eye contact.
- Never allow any part of the pad cleaner except the pad to make contact with the screen.
- Keep out of reach of children.

ES

- Almohadilla limpiadora con base que garantiza una limpieza a fondo sin arañazos ni marcas. El asa ergonómica de la almohadilla permite sujetarla firmemente y de forma segura durante la limpieza.
- El cepillo antiestático retractable quita el polvo.
- El líquido de la limpieza del no-alcohol de 200 ml quita la suciedad.
- Aproximadamente 250 aplicaciones. El número de aplicaciones puede variar dependiendo del uso.

1. Apaga el televisor o la pantalla antes de limpiarlos.
2. Empuja completamente hacia delante la palanca del cepillo retráctil de forma que el cepillo entero quede al descubierto.
3. Utiliza el cepillo para limpiar suavemente el polvo, la suciedad y otros restos de la pantalla LCD y plasma.
4. Agita el líquido de limpieza para pantallas. Mantén el bote a una distancia de 20 a 25 cm de la pantalla. Aplica spray en la pantalla 1-3 vez. Las pantallas más grandes necesitan un spray adicional.
5. Atrapa la almohadilla limpiadora. Coloca la almohadilla contra la pantalla. Extiende con suavidad el líquido desde el centro de la pantalla hasta los bordes. Utiliza las puntas triangulares para limpiar a fondo todas las esquinas.
6. Vuelve a colocar la almohadilla limpiadora en la base. Deja que se seque bien antes de guardarla.
7. Limpia la pantalla una vez cada dos semanas para obtener un visionado perfecto.

Precauciones

- Utiliza el líquido de limpieza con moderación. Si aplicas demasiado líquido puede gotear.
- No apuntes con el spray hacia los ojos de personas o animales. Consulta al médico inmediatamente en caso de contacto con los ojos.
- Evita tocar la pantalla con cualquier parte del limpiador que no sea la almohadilla.
- Mantener fuera del alcance de los niños.

SVC2546W/17

8670 000 52118

www.philips.com

©2008 Koninklijke Philips Electronics N.V.
All rights reserved.
Made in China

